



BACKSET
AS REQUIRED

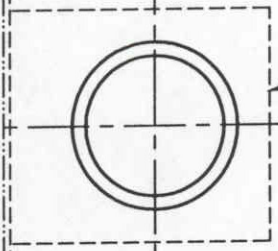

REINFORCEMENT BY DOOR MFG.

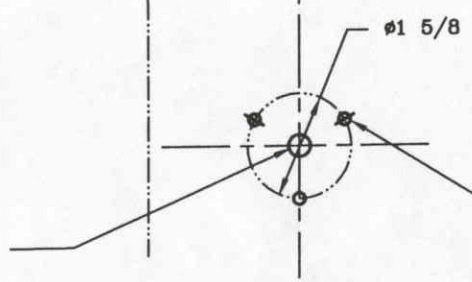

#8 SHEET METAL SCREWS
AT INSTALLATION (3 PLCS)
120° APART

1/4-20 MACHINE SCREW—OPTIONAL
(DO NOT DRILL THE HOLE UNLESS
SCREW IS USED)

DOOR PREPARATION

REV	DATE	TEMPLATE NO.
03.10.00		H-002

DO NOT SCALE

ARROW TEMPLATE

PRODUCT
H SERIES SINGLE DUMMY TRIM